

Monteringsanvisning

Regel Fix 560L/19, låsbar

Fix 560L/19 kan användas för såväl höger som vänsterhängda portar. Handtagets gång bestäms av hur stoppstiften "S" monteras. Stoppstiften placeras diagonalt vid "H" alternativt "V", se bild.


Viktigt!

Vid provmontering av handtag utan cylinder, använd vanlig spårskruv. Byt sedan till envägsskruven (denna går ej att demontera).

Montering

1. Mät ut centrumhöjden för låshuset = regelns handtagshöjd +5 mm.
2. Fäst bottenplåten med spik i lämpligt håll.
3. Skruva fast bottenplåten med vanlig skruv genom stoppstiften "S". Stoppstiften placeras i hålen märkta "H" eller "V" beroende på om handtaget ska vridas åt höger eller vänster.
4. Träd stångbyglarna på regelns stänger.
5. Koppla stängerna på låshusets länkar "L". Länkens långa tapp ska vara i stängen.

6. Skruva fast låshuset med de 4 medföljande säkerhetskruven. Tillse att låshuset nabbar går in i urtagen i bottenplåten.
7. Montera låscylindern i handtaget med de medföljande cylinderskruvarna.
8. Skruva fast handtaget med de 2 medföljande envägsskruvarna.
9. Ställ handtaget i öppet läge (stängerna indragna) och skruva fast stångbyglarna så långt ut som möjligt med de medföljande envägsskruvarna.

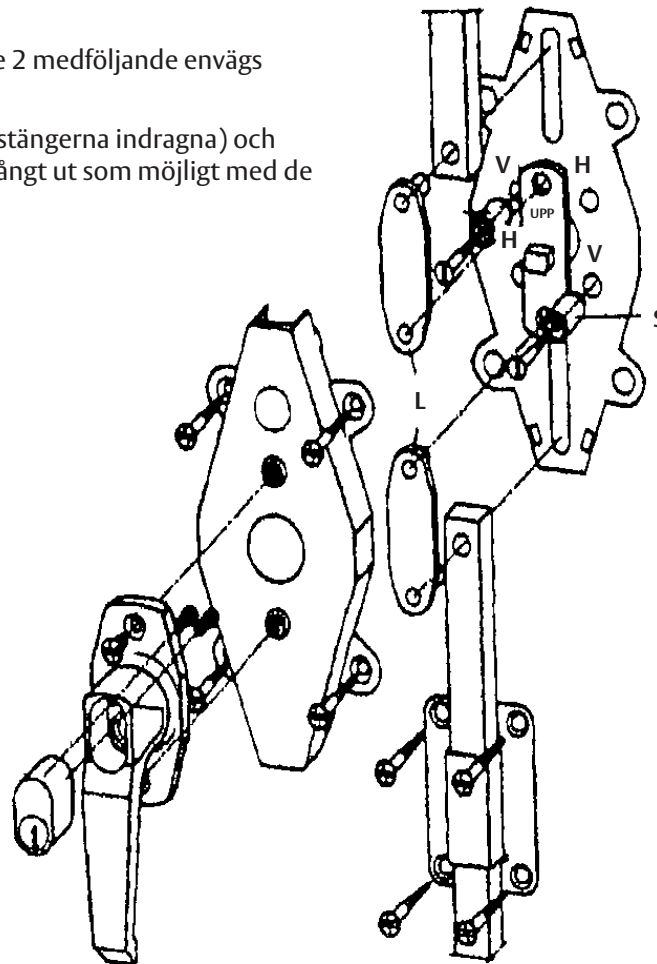

ASSA[®]
ASSA ABLOY

ASSA OEM AB
Bruksgatan 17
414 51 Göteborg
Tel. 031-704 40 00
info.fix@assaoem.se
www.assaoem.se

Fitting instructions

Bolt Fix 560L/19, lockable

Fix 560L/19 can be used for both right and left hung doors. This is determined by how the stoppers "S" are positioned. The stoppers are placed in the hole "H" or "V", see drawing.


Important!

When sample fitting for ensuring correct operation and when fixing the handle without cylinder, use normal screws. Change thereafter to the one-way screws (these can't be removed).

Fitting instructions

1. Mark the center height for the lock housing = handle height +5 mm.
2. Use nails to fix the back plate through a suitable hole.
3. Fix the backplate with the screws through the stoppers "S". The 2 stoppers is placed in the holes marked "H" if the handle is to move to the right, "V" if the handle is to move to the left.
4. Insert the bolt rods through the rod guides.
5. Connect the rods to the linkage arms "L". The longer pin should be inserted into the rod.

6. Fix the lock housing to the back plate with 4 one-way screws, ensuring that the housing fits correctly to the back plate.
7. Fix the cylinder to the handle with the cylinderscrews.
8. Fix the handle to the lock housing using the 2 one-way matching screws.
9. Move the handle into open position (rods retracted) and fix the rod guides as close to the outer ends possible using the supplied one-way screws.

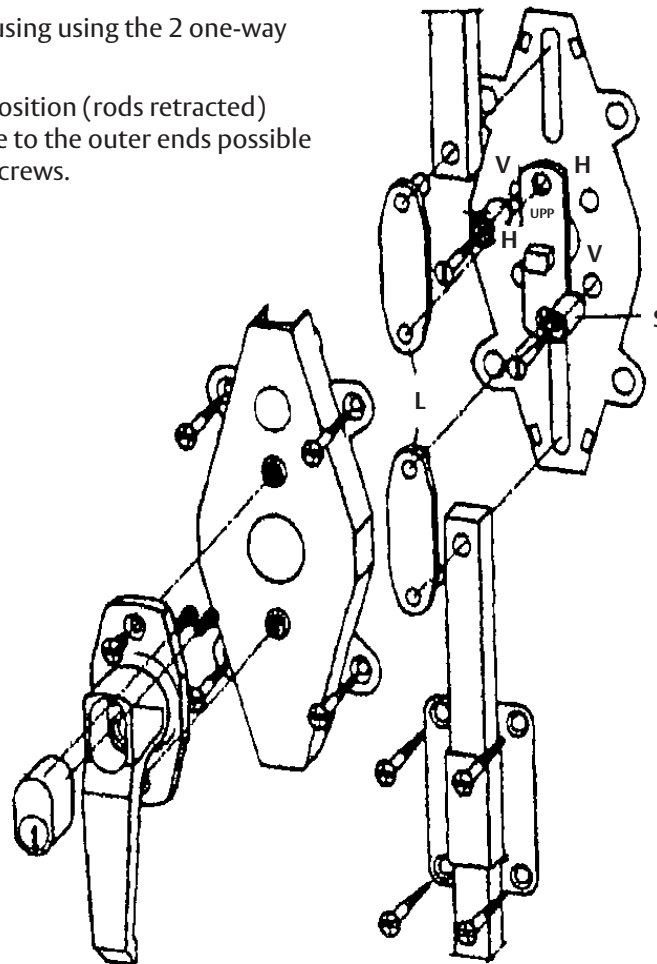

ASSA[®]
ASSA ABLOY

ASSA OEM AB
Bruksgatan 17
414 51 Göteborg
+46 (0)31-704 40 00
info.fix@assaoem.se
www.assaoem.se