

Monteringsanvisning

Fönsterbroms ASSA 532, för inåtgående sidohäng- och överhängt fönster.

Dörrbroms ASSA 533T, för inåtgående ytterdörr, fönsterdörr, förrådsdörr.

Montering

Placera karmfästet med centrumavstånd A enl tabell från gångjärnsidans karm som bilden visar. Bromsen måste placeras parallellt med karmen för att fungera korrekt.

Märk ut för skruvhålen på karmen.

Borra \varnothing 2,5 mm till 15 mm djup.



Skruva fast karmfästet på karmen.

Placera båg-/dörrfästet på fönsterbågen/dörren med centrumavstånd B enl tabell.

Märk ut för skruvhålen på fönsterbågen/dörren.

Borra \varnothing 2,5 mm till 15 mm djup.

Skruva fast båg-/dörrfästet på fönsterbågen/dörren.
Bromskraftens styrka kan nu regleras till rätt nivå med justerhylsan.

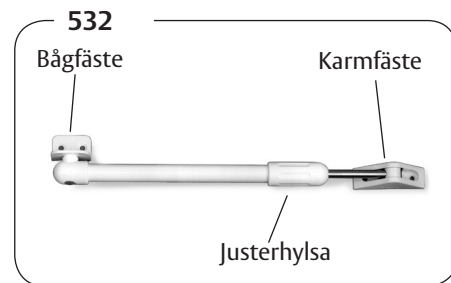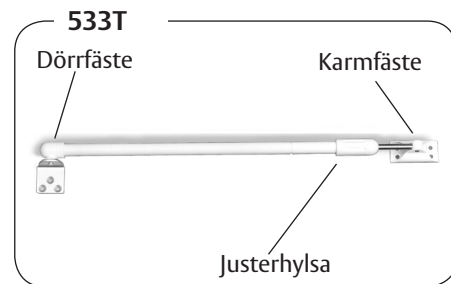

ASSA®

ASSA ABLOY

ASSA OEM AB


Box 121 99

402 42 Göteborg

Tel. 031 - 704 40 00

info.gbg@assaoem.se

www.assaoem.se



Art nr	Karmdagmått bredd mm	Öppningsvinkel	Mått A mm	Mått B mm
533T/1	500-700	ca 95°	120	310
533T/2	700-910	ca 95°	160	450
532/1	min 270	ca 90°	65	152
532/2	min 420	ca 90°	110	262

Fitting instructions

Casement stay ASSA 532, for inward-opening windows.

Door holder ASSA 533T, for inward-opening doors.

Fitting

Place the frame fixture with a distance A from the hinged side of the frame as shown on the drawing.

The friction stay must be fitted parallel to the door/window to work properly. Mark the screw holes on the door/window.

Drill \varnothing 2,5 mm to the depth of 15 mm.



Fit the friction stay with the enclosed screws. Place the friction stay with a distance B as shown on the drawing.

Mark the screw holes on the door/window.

Drill \varnothing 2,5 mm to the depth of 15 mm.

Fit the friction stay with the enclosed screws.

The breaking force is then possible to adjust with the friction adjuster to the right resistance.

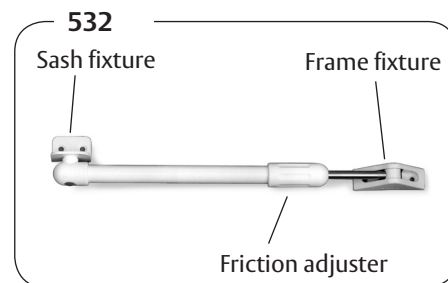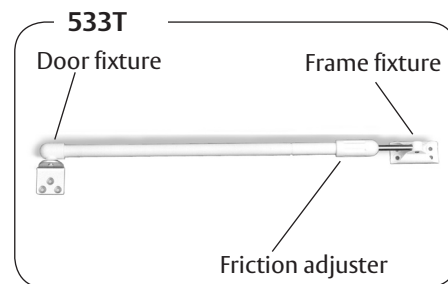

ASSA[®]

ASSA ABLOY

ASSA OEM AB


Box 121 99

402 42 Göteborg

+46 (0)31-704 40 00

info.gbg@assaoem.se

www.assaoem.se



Part no	Frame sight with mm	Opening angel	Dim A mm	Dim B mm
533T/1	500-700	approx 95°	120	310
533T/2	700-910	approx 95°	160	450
532/1	min 270	approx 90°	65	152
532/2	min 420	approx 90°	110	262